



NET RELOADING INSTRUCTIONS FOR

SUPER TALON™

NOTE THAT **SUPER TALON** DOES NOT LOAD AS DESCRIBED IN VIDEO. FOLLOW THESE INSTRUCTIONS CAREFULLY.

- 1. AFTER LAUNCHING REMOVE ALL WEIGHTS FROM NET BY RELEASING SLIP KNOTS AND SET WEIGHTS ASIDE.**
- 2. LAY NET OUT ON FLOOR – UNTANGLE ANY PORTIONS THAT MIGHT STILL BE ENGAGED BY SHAKING NET – REPLACE WEIGHTS ON NET IN DESIGNATED AREAS BY USING A SMALL SLIP KNOT.**




- 3. INSERT ATTACHED WEIGHTS COUNTER CLOCKWISE IN ALL HOLES.**

THE NET WILL NOT LAUNCH PROPERLY IF WEIGHTS ARE INSERTED INCORRECTLY.

PULL NET INTO STRAIGHT LINE.



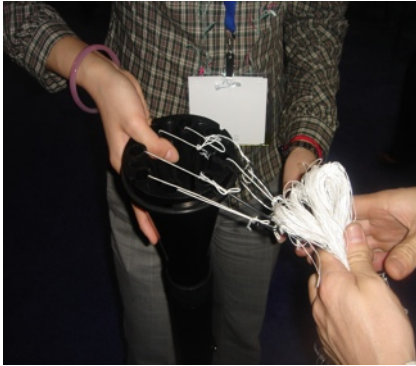

4. CAREFULLY FOLD NET OVER ITSELF FROM TOP TO BOTTON IN ABOUT THREE INCH SECTIONS OVERLAPPING THE NET AS YOU FOLD IT.



NOTE THAT NET IS FOLDED OVER ITSELF SEVERAL TIMES AND THAT THE PERSON HOLDING THE GUN AS PLACED THEIR FINGER IN A POSITION THAT ALLOWS THE FOLDED NET TO PASS THROUGH THE CENTER OF THE STRINGS ATTACHED TO THE WEIGHTS



5. CAREFULLY PLACE FOLDED NET THROUGH CENTER OF SEPARATED STRINGS AND SEAT INTO LAUNCHER.



5. SEAT NET FIRMLY IN PLACE IN CENTER OF STRINGS.



6. REPLACE CARDBOARD IN OUTER COVER RING.



7. LOCK RING IN PLACE - THE RING HAS A BAYONETTE TYPE MOUNT. THE NET LOADING IS COMPLETE.

FOLLOW RECHARGING INSTRUCTIONS ON ENCLOSED VIDEO. NEVER LOAD THE GUN WHEN IT IS PARTIALLY CHARGED. PLACE PIN IN RUBBER PLUG AND ALLOW ALL AIR TO BE RELEASED.